
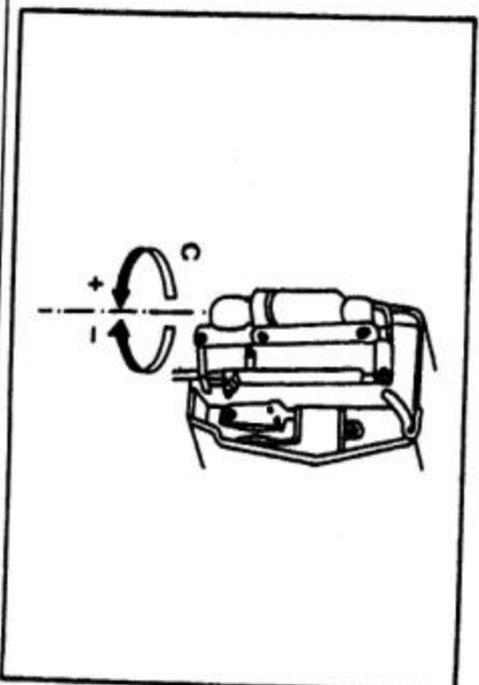


Changing the bulb



Disconnect the machine from the power supply by removing the plug from the main socket!

- Loosen screw (A) as illustrated.
- Remove the face plate (B).
- Unscrew the bulb and install a new one (C).
- Replace the face plate and tighten screw.

Should there be any problem, ask your local dealer for advice.

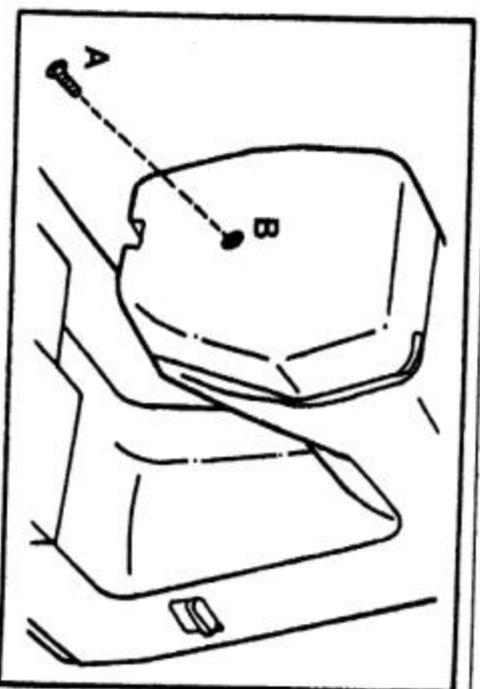

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

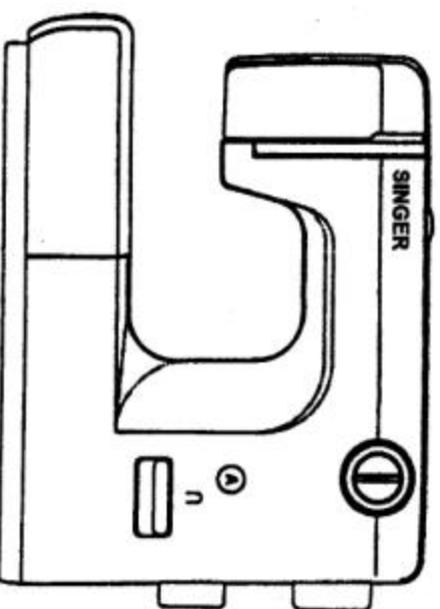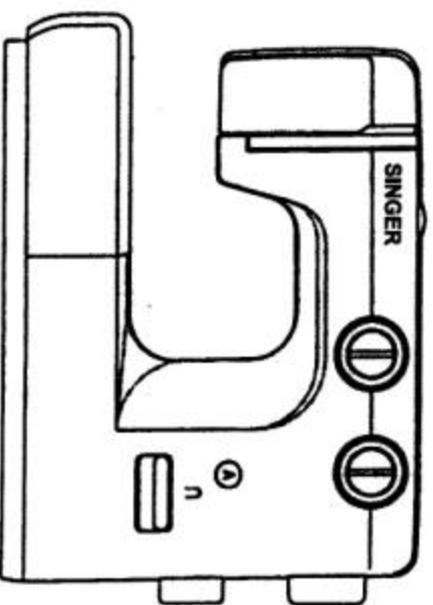

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

SINGER®

Instruction Manual

List of contents

| | |
|--|-----|
| Principal parts of the machine | 2/3 |
| Accessories | 4 |
| Fitting the snap-in sewing table | 5 |
| Connecting machine to power source | 6 |
| Changing the bulb | 7 |
| Two-step presser foot lifter | 8 |
| Attaching the presser foot holder | 9 |
| Winding the bobbin | 10 |
| Inserting the bobbin | 11 |
| Inserting and changing needles | 12 |
| Threading the upper thread | 13 |
| Thread tension | 14 |
| Raising the bobbin thread | 15 |
| Reverse sewing/Removing the work/cutting the thread | 16 |
| Matching needle/fabric/thread | 17 |
| Optional automatic needle threader | 18 |
| How to choose your stitch pattern | 19 |
| Function of stitch width dial and stitch length dial | 20 |
| Blind hem/lingerie stitch | 21 |
| Overlock stitches | 22 |
| Sewing on buttons | 23 |
| Sewing 4-step buttonholes | 24 |
| Zippers and piping | 25 |
| Multi-stitch zig-zag | 26 |
| Straight Stretch Stitch and Ric Rac Stitch (models A, B & C) | 27 |
| Honeycomb stitch (models A, B & C) | 28 |
| Sewing with the optional cording foot | 29 |
| Free motion darning | 30 |
| Practical stitches (models A, B & C) | 31 |
| Maintenance | 32 |
| Trouble shooting guide | 33 |
| | 34 |

www.matri.nl

Matri Naaimachine

specialisten sinds 1929

Lange Bisschopsstraat 9

7411 KG Deventer


Tel.: 0570 - 61 63 83

www.lockmachine.info

Principal parts of the machine

13. Handle
14. Bobbin winder
15. Horizontal spool pin
16. Handwheel
17. Pattern selector dial
18. Power and light switch
19. Main plug socket
20. Bobbin thread guide
21. Presser foot lever
22. Upper thread guide
23. Feed speed control
24. Power cord
25. Face plate

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

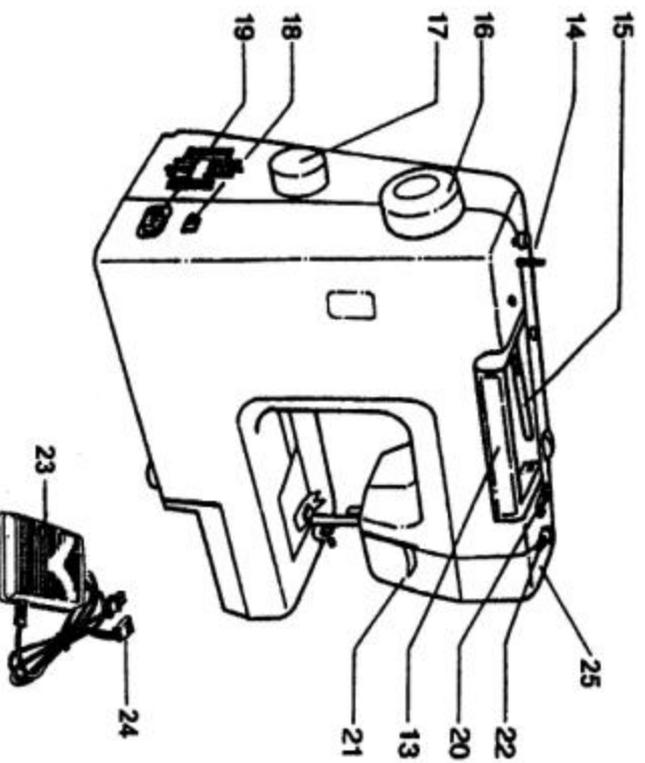


□ Accessories

Standard accessories Optional accessories

- a. All purpose foot (These 6 accessories are not supplied with this machine; they are however available as special accessories from your local dealer.)
- b. Zipper foot
- c. Buttonhole foot
- d. Button sewing foot
- e. L-screwdriver
- f. Seam ripper/brush
- g. Oil bottle
- h. Pack of needles
- i. Bobbin (3x)
- j. Seam guide
- k. Darning plate
- l. Spool holder
- m. Satin stitch foot
- n. Overcasting foot
- o. Hemmer foot
- p. Blind hem foot
- q. Cording foot
- r. Darning/Embroidery foot

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
 Lange Bisschopsstraat 9
 7411 KG Deventer
 Tel.: 0570 - 61 63 83
 www.lockmachine.info
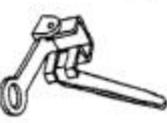
| Standard accessories | |
|----------------------|--|
| a |  0068906008 |
| b |  0069050008 |
| c |  0069090008 |
| d |  0069140008 |
| e |  0069050008 |
| f |  0069050008 |
| g |  0069050008 |
| h |  0069050008 |
| i |  0069050008 |
| j |  0069050008 |
| k |  0069050008 |
| l |  0069050008 |
| m |  0068904008 |
| n |  0068903008 |
| o |  0068900008 |
| p |  0068120008 |
| q |  0068100008 |
| r |  0066160008 |

Optional accessories available at extra cost

Connecting machine to power source

Connect the machine to a power source as illustrated (1).
This appliance is equipped with a polarized plug which must be used with an appropriate polarized outlet (2).

Attention:

Unplug power cord when machine is not in use.

Foot control

The foot control pedal regulates the sewing speed (3).

Attention:



Consult a qualified electrician if in doubt as to connect machine to power source.

Unplug power cord when machine is not in use.

The foot control must be used with the appliance by 4C-316B (110-120V area) / 4C-126G or 4C-326G (230V area) 4C-316C or 4C-326C (220-240V area) manufactured by MATSUSHITA ELECTRIC (TAIWAN) CO., LTD.

Sewing light


Press main switch (4) for power and light on.

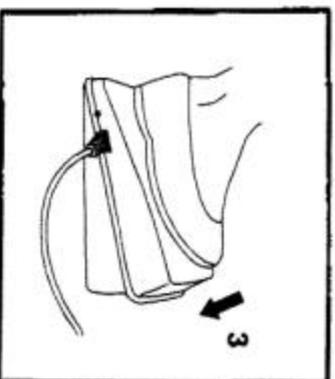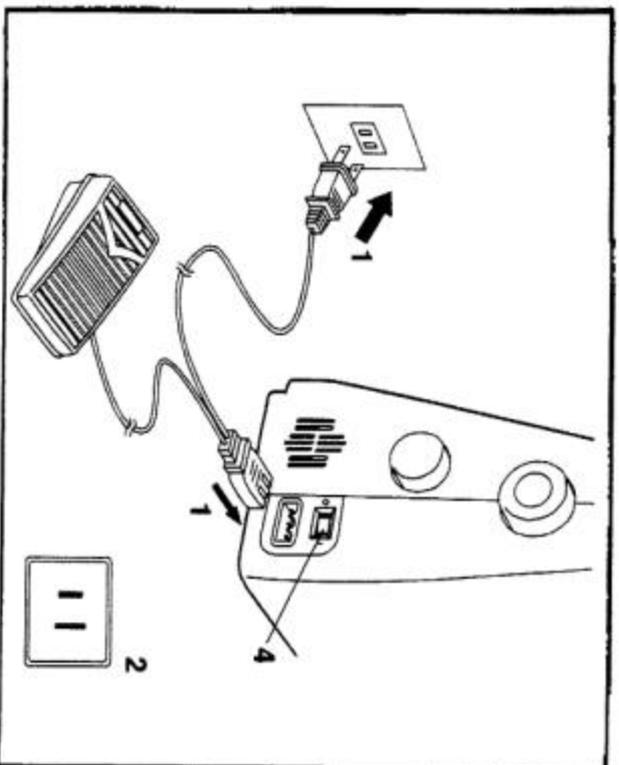

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info


Two-step presser foot lifter

When sewing several layers of thick fabrics, the presser foot can be raised to a high rise position for easy positioning of the work (A).

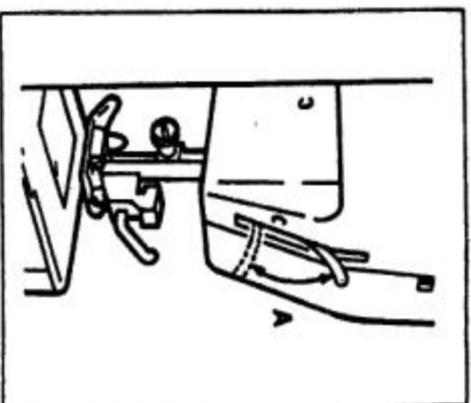

Adjusting presser foot pressure

The presser foot pressure of the machine has been pre-set and requires no particular readjustment according to the type of fabric (light or heavy weight). However, if you need to adjust the presser foot pressure, turn the pressure adjusting screw with a coin. For sewing very thin fabric, loosen the pressure by turning the screw counterclockwise, and for heavy fabric, tighten by turning it clockwise.

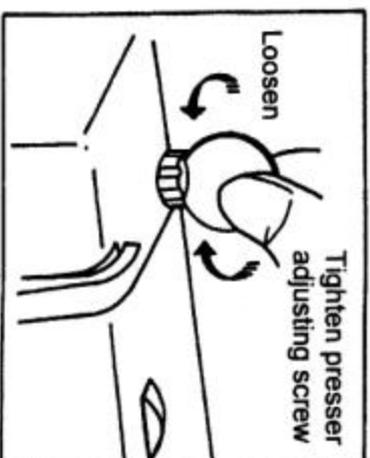

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

Attaching the presser foot holder

Raise the presser bar (a). Attach the presser foot holder (b) as illustrated.

Attaching the presser foot

Lower the presser foot holder (b) until the cut-out (c) is directly above the pin (d).

Raise the lever (e).

Lower the presser foot holder (b) and the presser foot (f) will engage automatically.

Removing the presser foot

Raise the presser foot.

Raise the lever (e) and the foot disengages.

Attaching the seam guide

Attach the seam guide (g) in the slot as illustrated. Adjust according to need for hems, pleats, etc.

Attention:

Turn power switch to "off" when carrying out any of the above operations!

www.matri.nl

Matri Naaimachine





specialisten sinds 1929

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

www.lockmachine.info

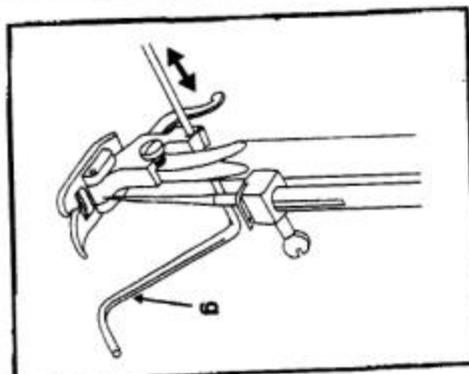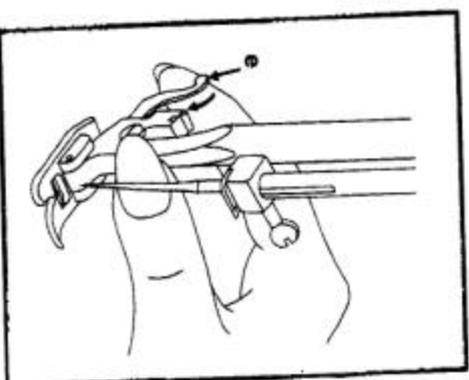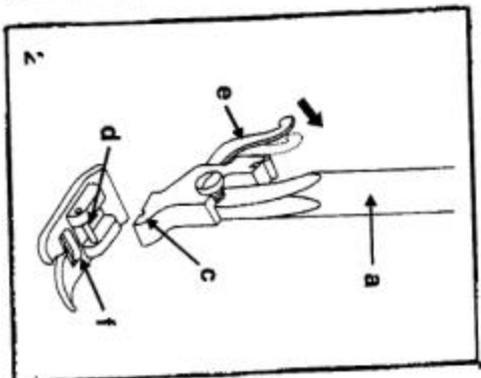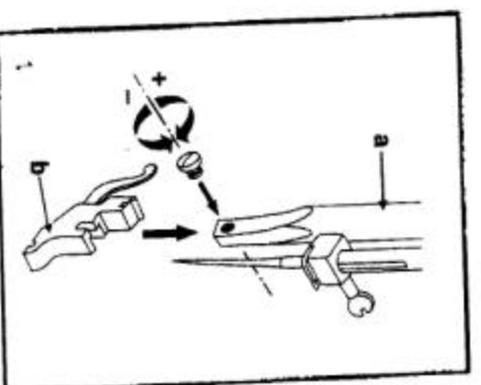

Winding the bobbin

Place thread and spool holder onto spool pin (1). For smaller spools of thread place spool holder with small side next to spool (2).

Snap thread into thread guide (3).

Wind thread clockwise around bobbin winder tension discs

(4).



Thread bobbin as illustrated and place on spindle (5).

Push bobbin to right (6).

Hold thread end (7). Step on foot control pedal (8).

Cut thread (9). Press bobbin to left (10) and remove.

Please Note: When the bobbin winder spindle is in "bobbin winding" position, the machine will not sew and the hand wheel will not turn. To start sewing, push the bobbin winder spindle to the left (sewing position).

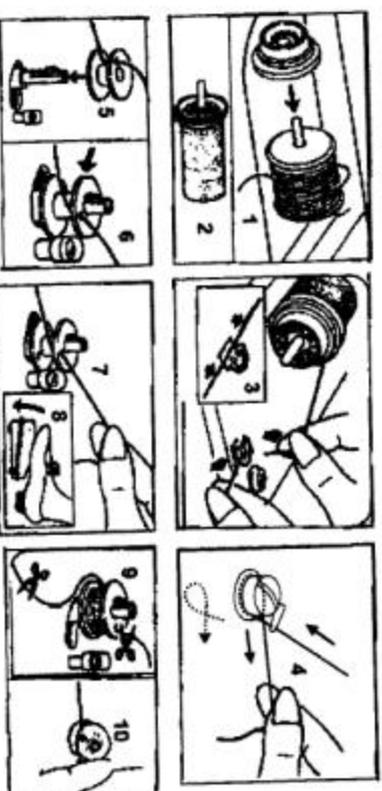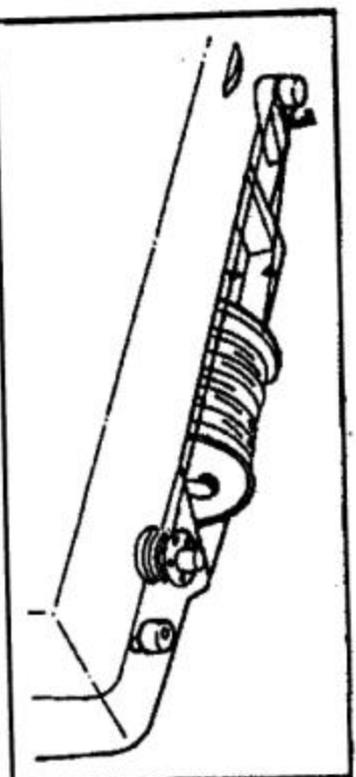

www.matri.nl

Matri Naaimachine

specialisten sinds 1929

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

www.lockmachine.info

Inserting the bobbin


When inserting or removing the bobbin, the needle must be fully raised.

Open the hinged cover (1).
Hold the bobbin case with one hand. Insert the bobbin so that the thread runs in a clockwise direction (arrow) (2).
Pull the thread through the slit and under the finger (3).
Hold the bobbin case by the hinged latch (4).
Insert it into the shuttle (5).

Attention:
Turn power switch to "off".

www.matri.nl

Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

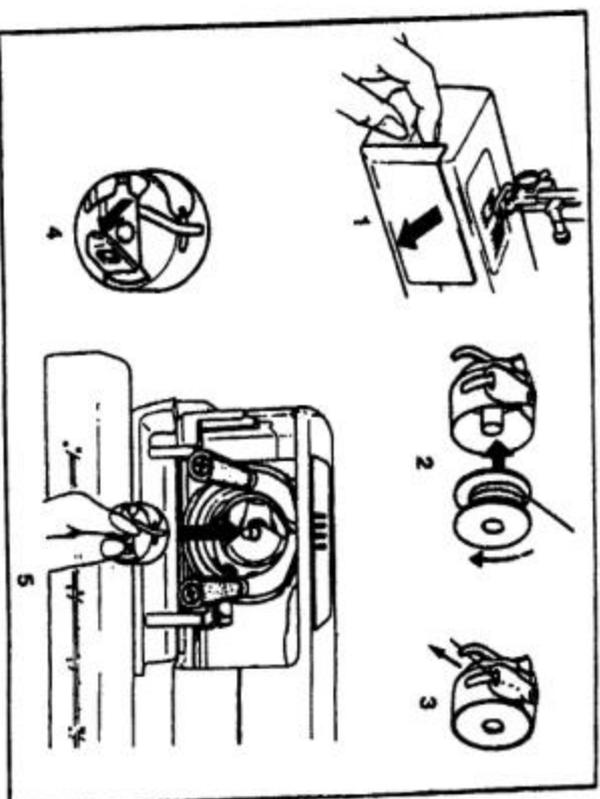

Inserting and changing needles

Change the needle regularly, especially if it is showing signs of wear and causing problems. For best sewing results always use Singer brand needles.

Insert the needle as illustrated as follows:

- Loosen the needle clamp screw and tighten again after inserting the new needle (A).
- The flat side of the shaft should be towards the back (B).
- Insert the needle as far up as it will go (C/D).

Attention:



Turn power switch to "off" before inserting or removing the needle.

Needles must be in perfect condition.

Problems can occur with:

- bent needles (a)
- blunt needles (b)
- damaged points (c)

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

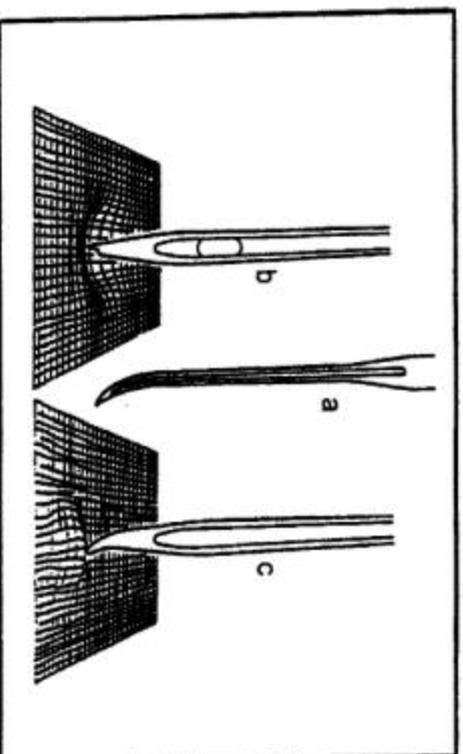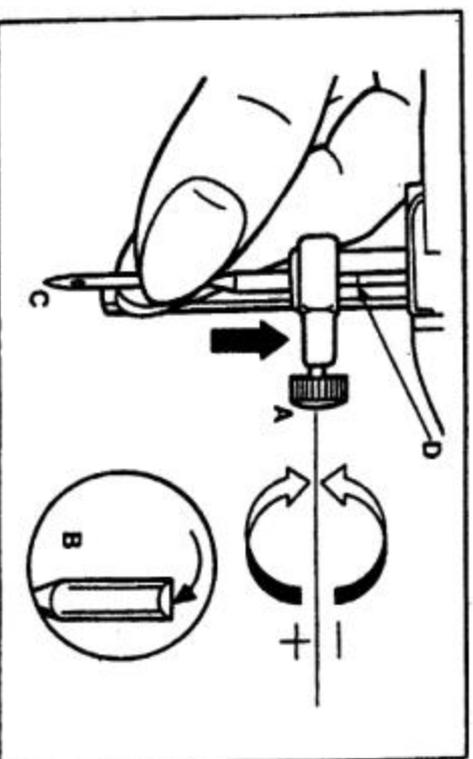


Threading the upper thread

This is a simple operation but it is important to carry out correctly as by not doing so several sewing problems could result.


- Start by raising the needle to its highest point (1), and also raise the presser foot to release the tension discs.
- (2) Note: For safety, it is strongly suggested you turn off the power before threading.
- Lift up the spool pin. Place the spool of thread on the holder with the thread coming off the spool as shown. (3) For small thread spools, place small side of spool holder next to spool.
- Draw thread from spool through the upper thread guide. (4)
- Guide thread around thread guide (5) pulling thread through pre-tension spring as illustrated.
- Thread tension module by leading thread down right channel and up left channel (6). During this process it is helpful to hold the thread between the spool and thread guide (4).
- At the top of this movement pass thread from right to left through the slotted eye of the take-up lever and then downwards again. (7)
- Now pass thread behind the thin wire needle clamp guide (8) and then down to the needle which should be threaded from front to back. Pull about 6-8 inches of thread to the rear beyond the needle eye. Trim thread to length with built in thread cutter.

Note: If your sewing machine is equipped with the factory installed optional automatic needle threader, instructions for use can be found on page 18.

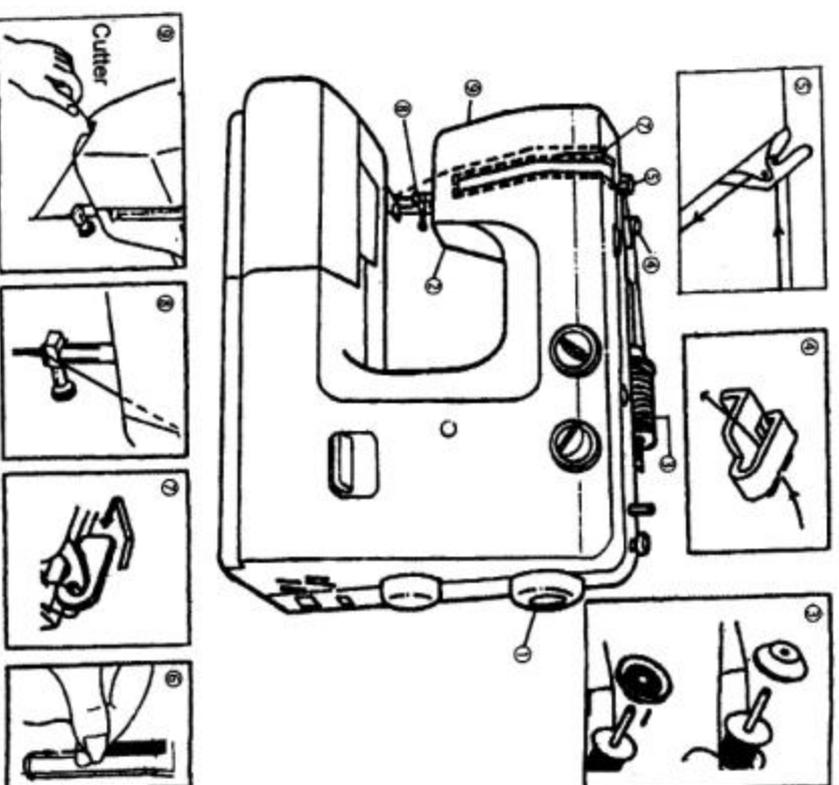


Reverse sewing

To secure the beginning and the end of seam, press down the reverse sewing lever. Sew a few reverse stitches. Release the lever and the machine will sew forwards again (A).

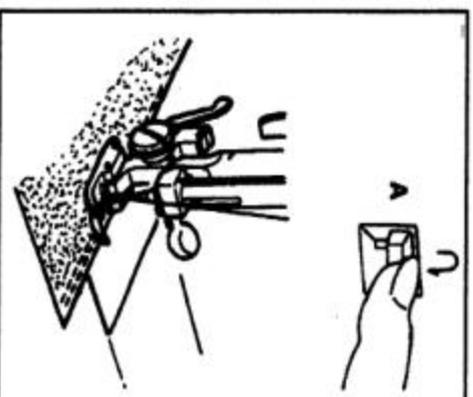

Removing the work

Turn the handwheel counterclockwise to bring the thread take up lever to its highest position, raise the presser foot and remove work behind the needle and presser foot.

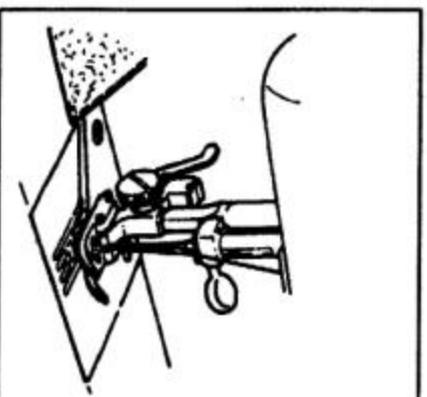

Cutting the thread

Cutting the thread:
Pull the threads behind the presser foot. Guide the threads to the side of the face plate and into thread cutter (B). Pull threads to cut.

www.matri.nl

Matri Naaimachine


specialisten sinds 1929

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

www.lockmachine.info

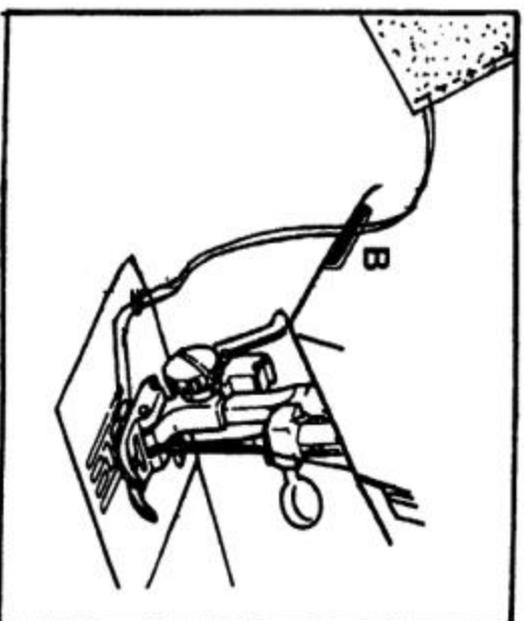

Matching needle/fabric/thread

NEEDLE, FABRIC, THREAD SELECTION GUIDE

| NEEDLE SIZE | FABRICS | THREAD |
|---------------|---|---|
| 9-11 (70-80) | Lightweight fabrics-thin cottons, voile, serge, silk, muslin, Qiama, interlocks, cotton knits, tricois, jerseys, crepes, woven polyester, shirt & blouse fabrics. | Light-duty thread in cotton, nylon, polyester or cotton wrapped polyester. |
| 11-14 (80-90) | Medium weight fabrics-cotton, satin, ketteciath, sailcloth, double knits, lightweight woollens. | Most threads sold are medium size and suitable for these fabrics and needle sizes. Use polyester threads on synthetic materials and cotton on natural woven fabrics for best results. Always use the same thread on top and bottom. |
| 14 (90) | Medium weight fabrics-cotton duck, woolen, heavier knits, terrycloth, denims. | |
| 16 (100) | Heavyweight fabrics-canvas, woollens, outdoor tent and quilted fabrics, denims, upholstery material (light to medium). | |
| 18 (110) | Heavy woollens, overcoat fabrics, upholstery fabrics, some leathers and vinyls. | Heavy duty thread, carpet thread. (Use heavy foot pressure-large numbers.) |

IMPORTANT: Match needle size to thread size and weight of fabric.

NEEDLE, FABRIC SELECTION

| NEEDLES | EXPLANATION | TYPE OF FABRIC |
|-------------|---|---|
| SINGER 2020 | Standard sharp needles. Sizes range thin to large. 9 (70) to 18 (110) | Natural woven fabrics-wool, cotton, silk, etc. Qiama. Not recommended for doubleknits. |
| SINGER 2045 | Semi-ball point needle, scarfed. 9 (65) to 18 (110) | Natural and synthetic woven fabrics, polyester blends. Knits-polyesters, interlocks, tricois, single and double knits. Also sweater knits, Lycra, swimsuit fabric, elastic. |
| SINGER 2025 | Twin needle | Woven fabrics and knits. |
| SINGER 2032 | Leather needles. 12 (80) to 18 (110) | Leather, vinyl, upholstery. (Leaves smaller hole than standard large needle.) |

Note:

1. Twin needles, can be purchased for utility and decorative work.
2. When sewing with twin needles, the stitch width dial should be set at less than 4.
3. For best sewing results, use only Genuine Singer needles.
4. Replace needle often (approximately every other garment) and/or at first sign of thread breakage



Optional automatic needle threader

* The automatic needle threader is a factory installed option.
If your machine has this option use the following instructions:

- Raise the needle to its highest position.
- Press lever (A) down as far as it will go.
- The threader automatically swings to the threading position (B).
- Pass thread around thread guide (C).
- Pass the thread in front of the needle around the hook (D) from bottom to top.
- Release lever (A).
- Pull the thread through the needle eye.

Attention:
Turn power switch to "0"!

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

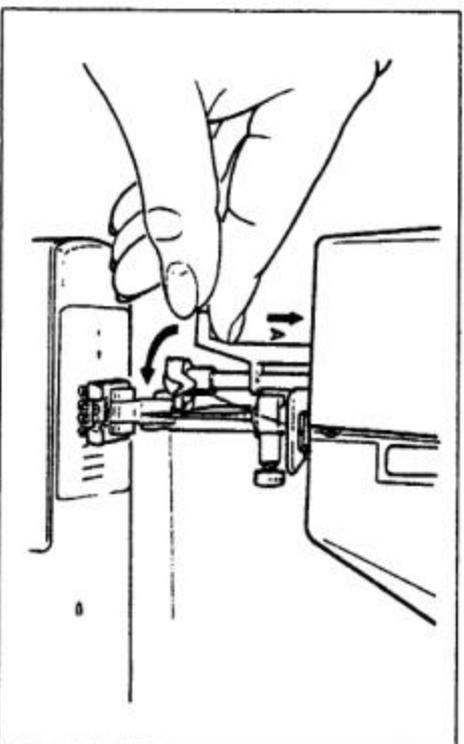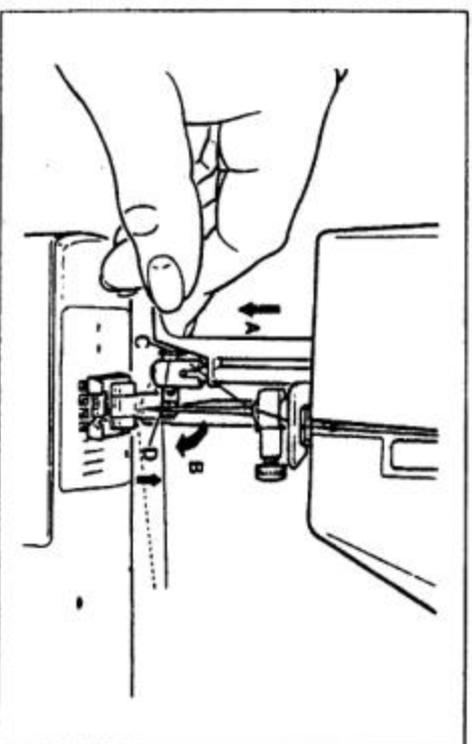

Function of stitch width dial and stitch length dial

Function of stitch width dial (models A & B)




The maximum zigzag stitch width for zigzag stitching is 5mm; however, the width can be reduced on any patterns. The width increases as you move zigzag dial from "0" – "5". For twin needle sewing, never set the width wider than "3" (1).
The stitch width dial is also the control for the straight stitch infinite needle position. 0 position is full left, 5 is full right and between 2 and 3 is center needle position.

Function of stitch length dial while zigzagging (models A, B & C)

The density of zigzag stitches increase as the setting of stitch length dial approaches "0".
Neat zigzag stitches are usually achieved at "2.5" or below (2).

Closed up zigzag stitches are called satin stitches (2).

For straight stitch sewing, generally speaking, the thicker the fabric, thread and needle, the longer the stitch should be.

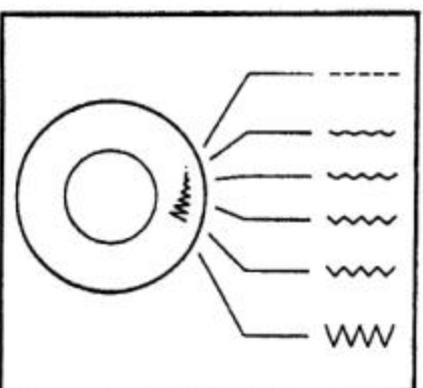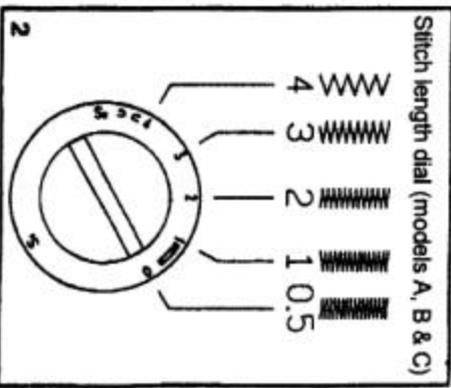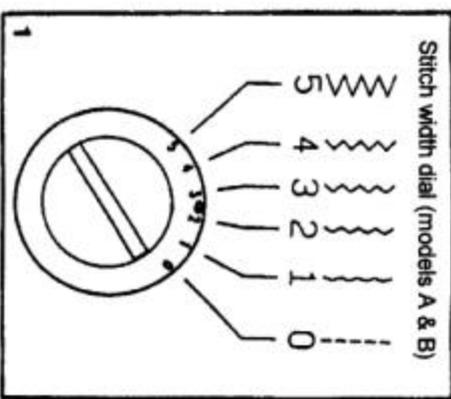

For model D the width of Zig Zag Stitch Pattern (only) is adjustable with Stitch Pattern Selector Dial.

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
 Lange Bisschopsstraat 9
 7411 KG Deventer
 Tel.: 0570 - 61 63 83
www.lockmachine.info

Blind hem/lingerie stitch

- * The blindhem foot is an optional accessory not supplied with this machine.
For hems, curtains, trousers, skirts, etc.
 - Blind hem for stretch fabrics.
 - Blind hem/lingerie for firm fabrics.
- Set the machine as illustrated (1).


Note:
It takes practice to sew blind hems. Always make a sewing test first.

- (1) Fold the fabric as illustrated with the wrong side uppermost (2).
Place the fabric under the foot. Turn the handwheel forwards by hand until the needle swings fully to the left. It should just pierce the fold of the fabric. If it does not, adjust the stitch width accordingly (3).
- (2) Adjust the guide (4) by turning the knob (5) so that the guide just rests against the fold.
- (3) Sew slowly, guiding the fabric carefully along the edge of the guide.
- (4) Turn the speed control to minimum!

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KC Deventer
Tel.: 0570 - 61 63 83
www.loekmachine.info

Stitch width dial (models A & B)

Stitch length dial (models A, B & C)

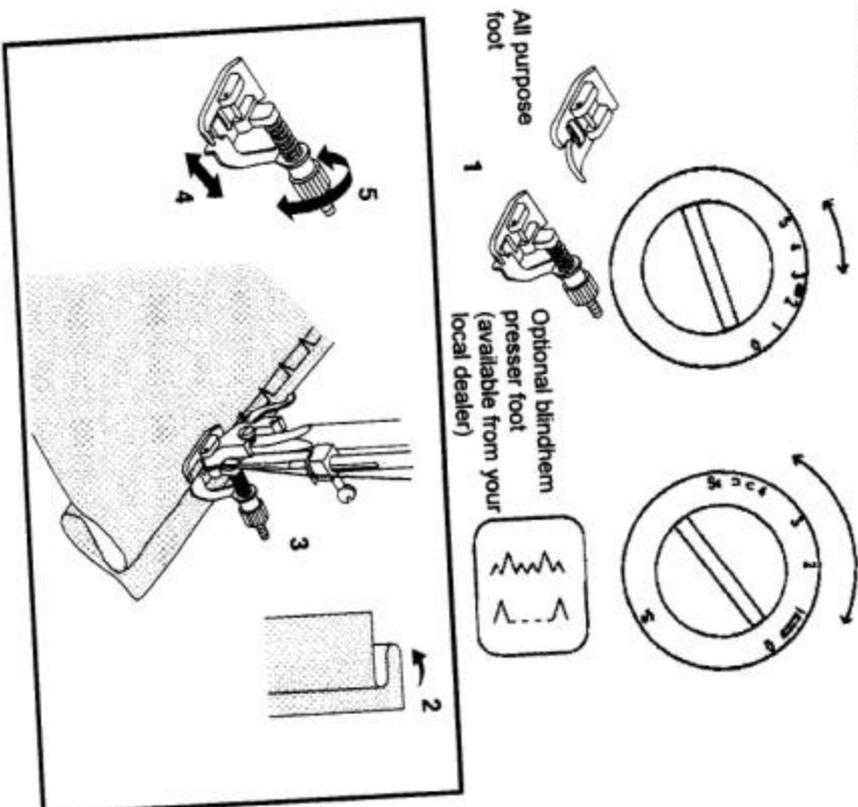

Overlock stitches

The overcasting foot is an optional accessory not supplied with this machine.
Seams, overcasting, visible hems.

Double overlock stitch (A) 

For fine knits, handknits, seams.

Standard overlock (B) 

For fine knits, jerseys, neck edges, ribbing.

Stretch overlock (C) 

For fine knits, jerseys, neck edges, ribbing.


All overlock stitches are suitable for sewing and overcasting edges and visible seams in one operation.
When overcasting the needle should just go over the edge of the fabric.

Attention:

Use new needles or ball point needles to avoid skipping.

Stitch width dial (models A & B)



Stitch length dial (models A, B & C)

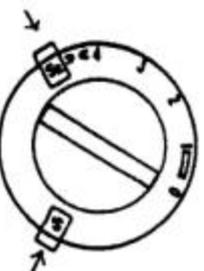

All purpose foot



Optional overcasting foot
(available from your local

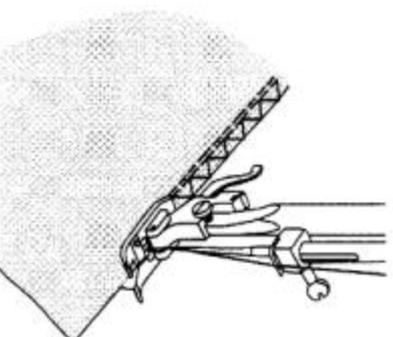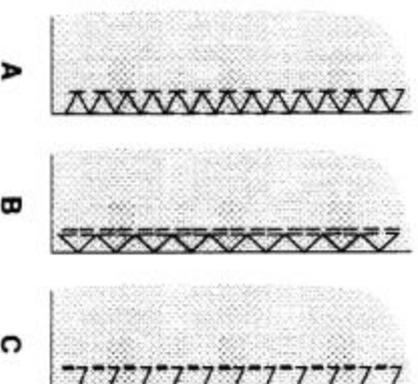




Sewing on buttons

Install the darning plate (1a).

Change Presser foot to Button sewing foot (1b).

Position the work under the foot. Place the button on the marked position, lower the foot. Adjust stitch width to "0" and sew a few securing stitches. Set the stitch width to number "3". Turn the handwheel to check that the needle goes cleanly into the left and right holes of the button (adjust the stitch width according to the button), and slowly sew on the button with about 10 stitches. Adjust the stitch width to "0" and sew a few securing stitches (2).

If a shank is required, place a darning needle on top of the button and sew (3). For buttons with 4 holes, sew through the front two holes first (2), push work forward and then sew through the back two holes as described (3).

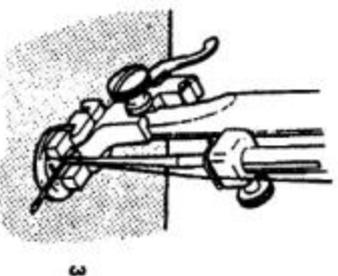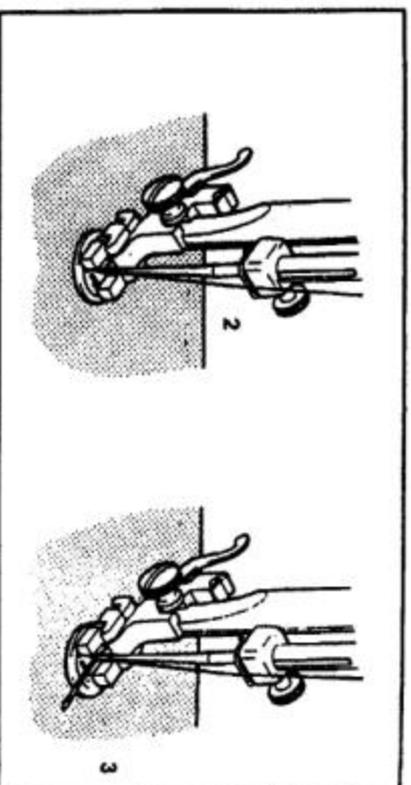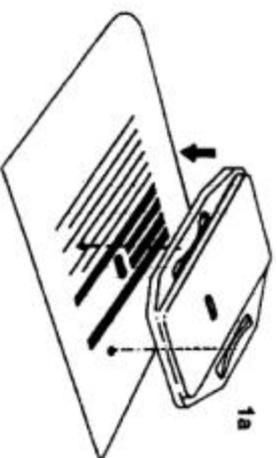

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

Sewing 4-step buttonholes

Prepare

1. Take off the all purpose foot and attach the buttonhole foot.
2. Measure diameter and thickness of button and add 0.3 cm (1/8") for bartacks; mark buttonhole size on fabric.
3. Place fabric under the foot, so that the marking on the buttonhole foot aligns with starting marking on fabric. Lower the foot, so that the buttonhole center line marked on the fabric aligns with the center of the buttonhole foot.


Adjust the stitch length dial in the "STITCH" to set stitch density. Note: density varies according to the fabric. Always test sew a buttonhole.

Follow the 4-step sequence changing from one step to another with the stitch pattern selector dial. Take care not to sew too many stitches in stages 2 and 4. Use seam ripper and cut buttonhole open from both ends towards the middle.




Tips:

- Slightly reduce upper thread tension to produce better results.
 - Use a backing for fine or stretchy fabrics.
 - It is advisable to use heavy thread or cord for stretch or knit fabrics.
- The zig-zag should sew over the heavy thread or cord.

Stitch width dial (models A & B)
(if your machine has dial)

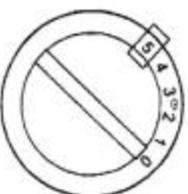

Stitch length dial
(models A, B & C)

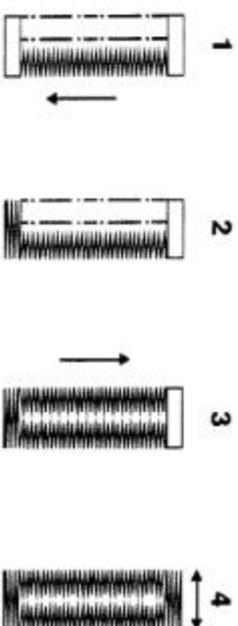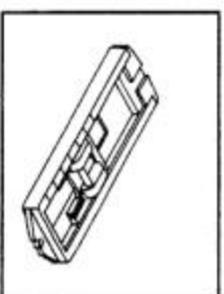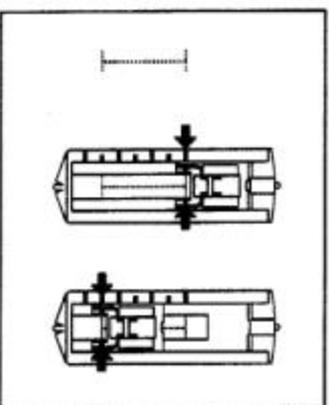

www.matri.nl

Matri Naaimachine

specialisten-sinds-1929

Lange Bisschopsstraat 9

7411 KG Deventer

Tel.: 0570 - 61 63 83

www.lockmachine.info

Zippers and piping


Set the machine as illustrated.

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

The zipper foot can be attached right (1) or left (2) depending on which side of the foot you are going to sew.
To sew past the zipper pull, lower the needle into the fabric, raise the presser foot and push the zipper pull behind the presser foot. Lower the foot and continue to sew.
It is also possible to sew in a length of cord, into a bias strip to form a 'welt' (3).
Set stitch length control between 1-4 (according to thickness of fabric).

Stitch width dial (models A & B)

Stitch length dial (models A, B & C)

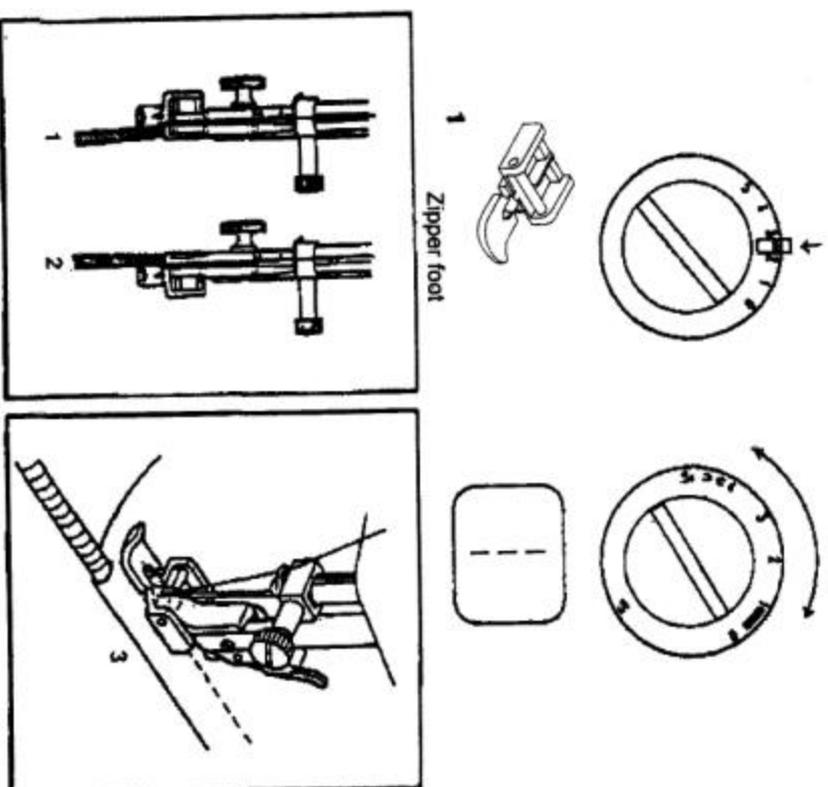

Sewing with the optional hemmer foot

* The hemmer foot is an optional accessory not supplied with your machine.

For hems in fine or sheer fabrics.


Set the machine as illustrated (1).

Neaten the edge of the fabric. At the beginning of the hem, turn under the edge twice by about 3 mm (1/8") and sew 4-5 stitches to secure. Pull the thread slightly towards the back. Insert the needle into the fabric, raise the presser foot and guide the fold into the scroll on the foot (2).


Gently pull the fabric edge towards you and lower the presser foot.

Begin sewing, guiding the fabric into the scroll by holding it upright and slightly to the left (3).



Stitch width dial
(models A & B)

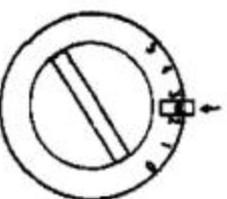

Stitch length dial
(models A, B & C)

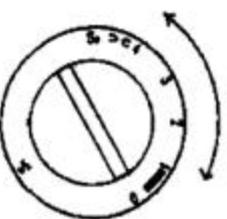

Optional hemmer
foot
(Available from
your local dealer)

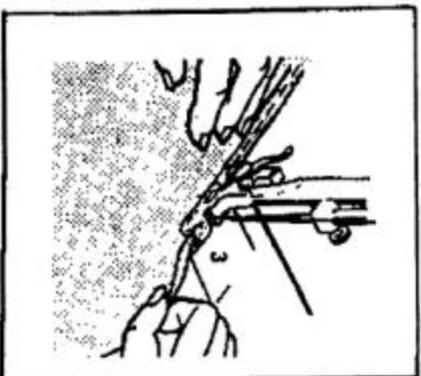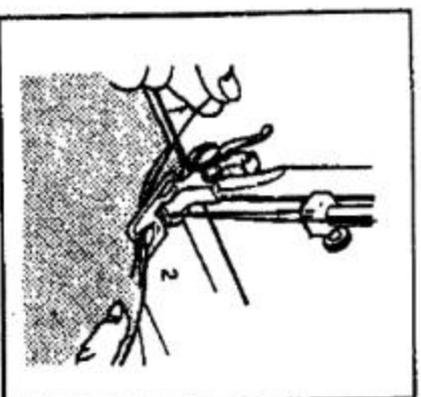

www.matri.nl
Matri Naaimachine
specialisten slnds 1929
Lange Bisschopsstraat 9
7411 KC Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

Multi-stitch zig-zag

Sewing on lace and elastic, darning, mending, reinforcing edges, bar tacks.


Set the machine as illustrated (1).

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info


Place patch in position. The stitch length can be shortened to produce very close stitches (2).

When mending tears, it is advisable to use a piece of backing fabric to reinforce. The stitch density can be varied by adjusting the stitch length. First sew over the centre and then overlap on both sides. Depending on the type of fabric and damage, sew between 3 and 5 rows (3).


Stitch width dial (models A & B)

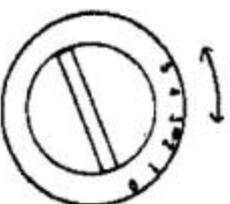

Stitch length dial (models A, B & C)

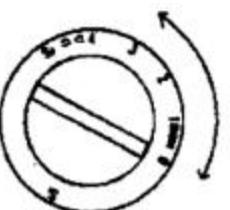

All purpose foot

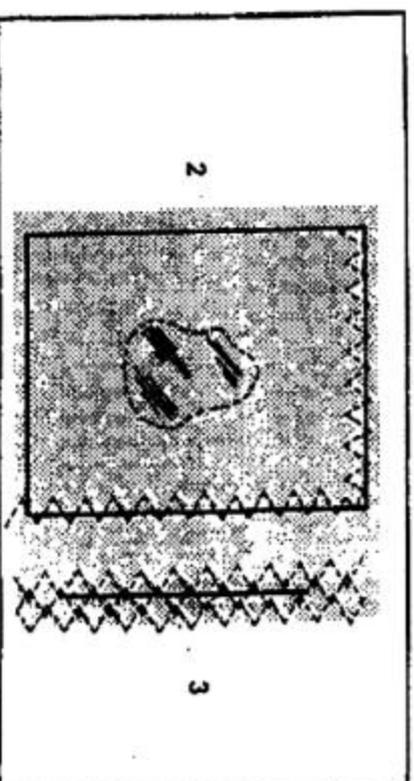

Straight Stretch Stitch and Ric Rac Stitch (models A, B & C)

Straight Stretch Stitch





Used to add triple reinforcement to stretch and hardwearing seams.

Turn the stitch length dial to "S1".
The machine sews two stitches forwards and one stitch backwards.

Ric Rac Stitch

Turn the stitch length dial to "S1".
Adjust the stitch width dial to between "3 and 5".

Ric Rac Stitch is suitable for firm fabrics like denim, corduroy, poplin, duck, etc.
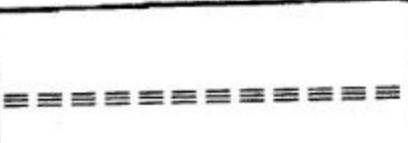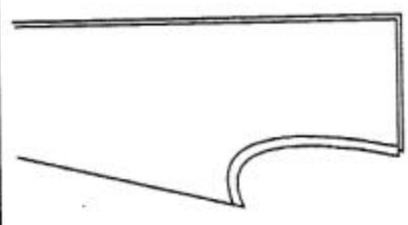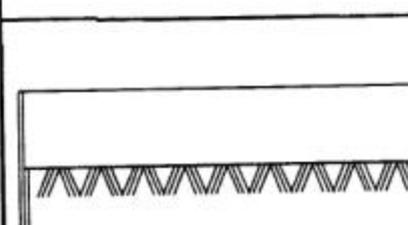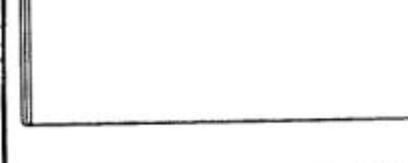
| | Stitch width dial (models A & B) | Stitch length dial (models A, B & C) | Stitch width dial (models A & B) | Stitch length dial (models A, B & C) |
|---|--|--|--|--|
|  |  |  |  |  |
|  |  |  |  | |
| <p>All purpose foot</p> |  |  |  |  |
| <p>Straight Stretch Stitch</p> | | | <p>Ric Rac Stitch</p> | |

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
 Lange Bisschopsstraat 9
 7411 KG Deventer
 Tel.: 0570 - 61 63 83
 www.lockmachine.info

Honeycomb stitch (models A, B & C)

Seams, hems, T-shirts, underwear, etc.

Set the machine as illustrated.





www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

This stitch can be used for all types of jersey and woven fabrics.

When sewing honeycomb stitch pattern for hemming sew at 1 cm (1/4") from the fabric edge and trim the surplus fabric.

Stitch width dial (models A & B)

Stitch length dial (models A, B & C)

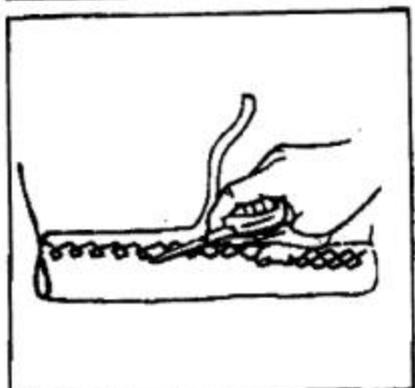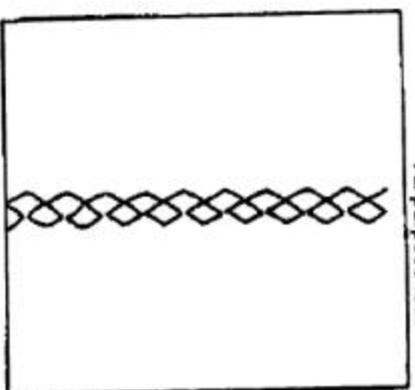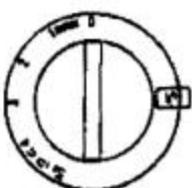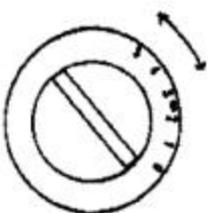

Sewing with the optional cording foot

* The Cording Foot is an optional accessory not supplied with your machine.


Decorative effects, cushions, tablecloths, etc.

Set the machine as illustrated. In addition to zig zag, various other stitches are suitable for sewing on cord, e.g. blindhem, multi-stitch zig zag and selected decorative stitches.


Insert the cord between the spring covering the cord groove and the foot (1). The cord should run in the groove. One, two or three cords can be sewn on. The stitch width is adjusted according to the number of cords and the stitch selected (2).

www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KG Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info



Stitch width dial (models A & B)

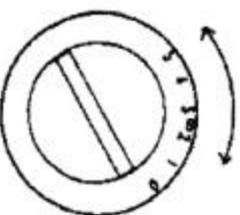

Stitch length dial (models A, B & C)

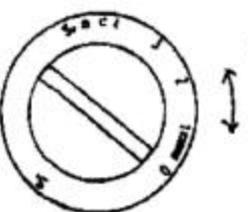

Optional
cording foot
(Available from
your local
dealer)

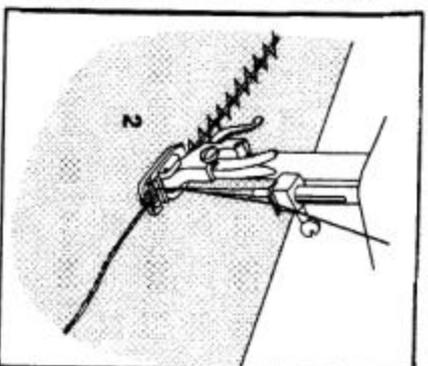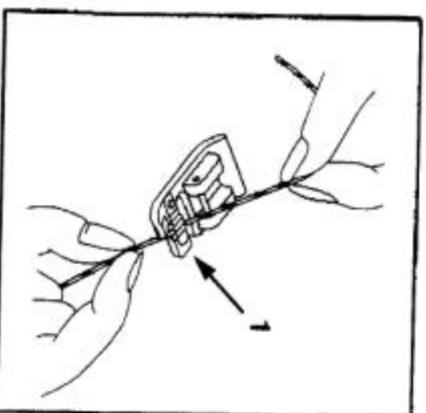

Free motion darning

* The darning foot is an optional accessory not included with your machine.

Set the machine as illustrated (1). Install the darning plate (2).



Remove the presser foot clamp (3).

Attach the darning foot to the presser foot holder. The lever (A) should be behind the needle clamp screw (B). Press the Darning foot on firmly from behind with your index finger and tighten the screw (C) (4).

First sew around the edge of the hole (to secure the threads) (5). First row: Always work from left to right. Turn work by 1/4 and oversew.

A darning ring is recommended for easier sewing and better results.




Note: Free motion darning is accomplished without the sewing machine internal feed system. Movement of the fabric is controlled by the operator. It is necessary to coordinate sewing speed and movement of fabric.

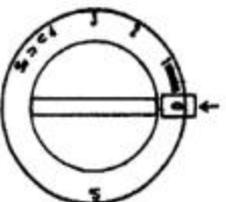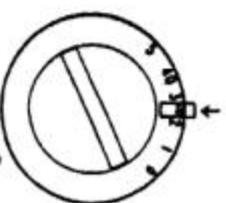

Note: Stitch length cannot be controlled with dial as feed dogs are lowered.



Optional darning foot (Available from your local dealer)

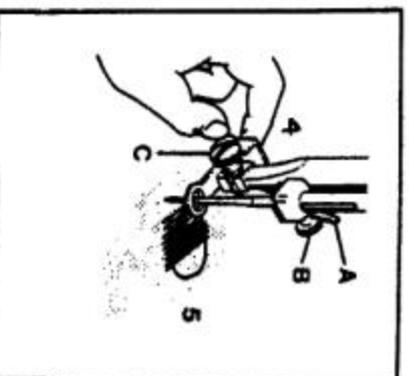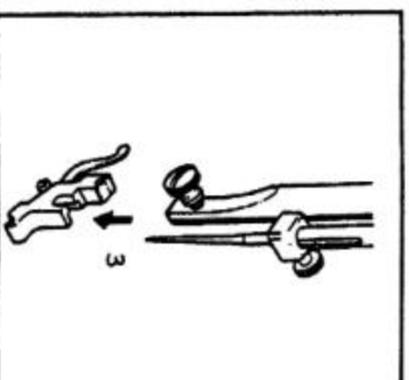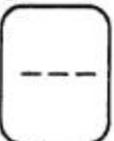

Practical stitches (models A, B & C)

Set the machine as illustrated.

Turn the switch width dial and stitch length dial to the same colour code and adjust to suit the fabric.

Shell Stitch (A)

For decorative edges.

Suitable for edges on sheer, fine and stretch fabrics. The larger stitch should go just over the edge of the fabric to create the shell effect.

Feather or Thorn Bridging Stitch (B)

For seams, place mats, tablecloths.


Decorative joining seam for a fagotted effect.

Rampart Stitch (C)


Gathering with cord or shirring with elastic.

This stitch can be used for firm, thicker fabrics.

Stitch width dial (models A & B)

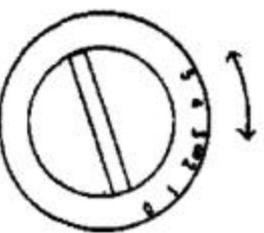

Stitch length dial (models A, B & C)

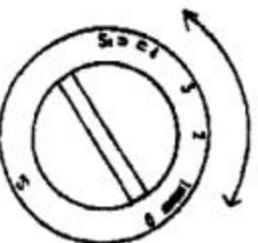

All purpose foot



www.matri.nl
Matri Naaimachine
specialisten sinds 1929
Lange Bisschopsstraat 9
7411 KC Deventer
Tel.: 0570 - 61 63 83
www.lockmachine.info

□ Maintenance

Attention:

Disconnect the machine from the electricity supply by removing the plug from the mains socket. When cleaning the machine, it must always be disconnected from the electricity supply.

Remove the needle plate:

Turn the handwheel until the needle is fully raised. Open the hinged front cover and unscrew the needle plate screws with the screw driver (1).

Cleaning the feed dogs:




Use the brush supplied to clean the whole area (2).

Cleaning and lubricating the hook:

Remove the bobbin case. Snap the two hook retaining arms (3) outwards. Remove the hook race cover (4) and the hook (5) and clean with a soft cloth. Lubricate at the point (6) (1-2 drops) with sewing machine oil. Turn the handwheel until the hook race (7) is in the left position. Replace the hook (5). Replace the hook race cover and snap back the two hook retaining arms. Insert the bobbin case and bobbin and replace the stitch plate.

Important:

Fabric fluff and threads must be removed regularly. Your machine should be serviced at regular intervals at one of our service agencies.

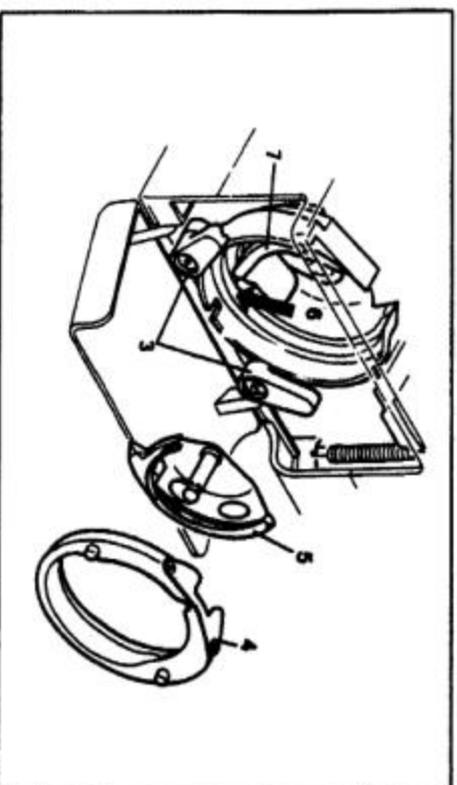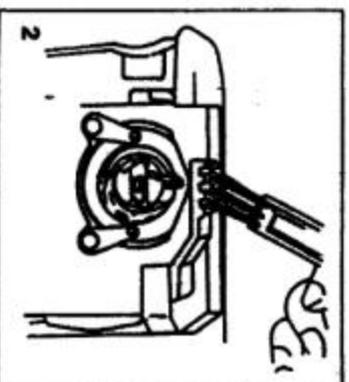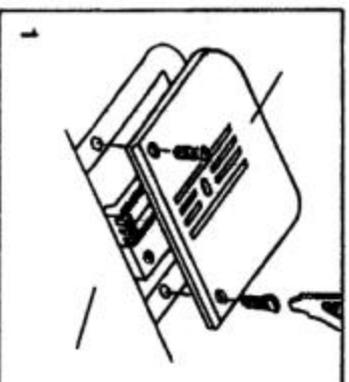

Trouble shooting guide

| Problem | Cause | Correction |
|------------------------------|---|--|
| Upper thread breaks | <ol style="list-style-type: none">1. The machine is not threaded correctly2. The thread tension is too tight3. The thread is too thick for the needle4. The needle is not inserted correctly5. The thread is wound around the spool holder pin6. The needle is damaged | <ol style="list-style-type: none">1. Rethread the machine2. Reduce the thread tension (lower number)3. Select a larger needle4. Remove and reinsert the needle (flat side towards the back)5. Remove the spool and wind thread onto thread spool6. Replace the needle |
| Lower thread breaks | <ol style="list-style-type: none">1. The bobbin case is not inserted correctly2. The bobbin case is threaded wrongly3. The lower thread tension is too tight | <ol style="list-style-type: none">1. Remove and reinsert the bobbin case and pull on the thread. The thread should pull easily2. Check both bobbin and bobbin case3. Loosen lower thread tension as described |
| Skipped stitches | <ol style="list-style-type: none">1. The needle is not inserted correctly2. The needle is damaged3. The wrong size needle has been used4. The foot is not attached correctly | <ol style="list-style-type: none">1. Remove and reinsert needle (flat side towards the back)2. Insert a new needle3. Choose a needle to suit the thread and fabric4. Check and attach correctly |
| Needle breaks | <ol style="list-style-type: none">1. The needle is damaged;2. The needle is not correctly inserted3. Wrong needle size for the fabric4. The wrong foot is attached | <ol style="list-style-type: none">1. Insert a new needle2. Insert the needle correctly (flat side towards the back)3. Choose a needle to suit the thread and fabric4. Select the correct foot |
| Loose stitches | <ol style="list-style-type: none">1. The machine is not correctly threaded2. The bobbin case is not correctly threaded3. Needle/fabric/thread combination is wrong4. Thread tension wrong | <ol style="list-style-type: none">1. Check the threading2. Thread the bobbin case as illustrated3. The needle size must suit the fabric and thread4. Correct the thread tension |
| Seams gather or pucker | <ol style="list-style-type: none">1. The needle is too thick for the fabric2. The stitch length is wrongly adjusted3. The thread tension is too tight | <ol style="list-style-type: none">1. Select a finer needle2. Readjust the stitch length3. Loosen the thread tension |
| Uneven stitches, uneven feed | <ol style="list-style-type: none">1. Poor quality thread2. The bobbin case is wrongly threaded3. Fabric has been pulled | <ol style="list-style-type: none">1. Select a better quality thread2. Remove bobbin and rethread and insert correctly3. Do not pull on the fabric while sewing, let it be fed by the machine |
| The machine is noisy | <ol style="list-style-type: none">1. The machine must be lubricated2. Fluff or oil have collected on the hook or needle bar3. Poor quality oil has been used4. The needle is damaged | <ol style="list-style-type: none">1. Lubricate as described2. Clean the hook and feed dog as described3. Only use good quality sewing machine oil4. Replace the needle |
| The machine jams | <ol style="list-style-type: none">1. Thread is caught in the hook | <ol style="list-style-type: none">1. Remove the upper thread and bobbin case, turn the handwheel backwards and forwards by hand and remove the thread remnants. Lubricate as described |